



PRICE[®]



DR360-DH
DISPLACEMENT VENTILATION
INSTALLATION & SERVICE MANUAL
II-00017

Date: 04/12
Reference #: J-10q

www.price-hvac.com

Installation Instructions

- 1) Locate & mark location of tabs that are fastened directly to the support rods.
- 2) Locate diffuser onto end of duct section.
- 3) Secure duct onto diffuser with self drilling screws or drill pilot hole and use regular sheetmetal screws (supplied by others) at each of the tabs previously located in step 1.
- 4) Add at least 4 extra screws at various points around diffuser collar into duct.
- 5) Secure diffuser to building structure for extra support (by others) as required by local code.

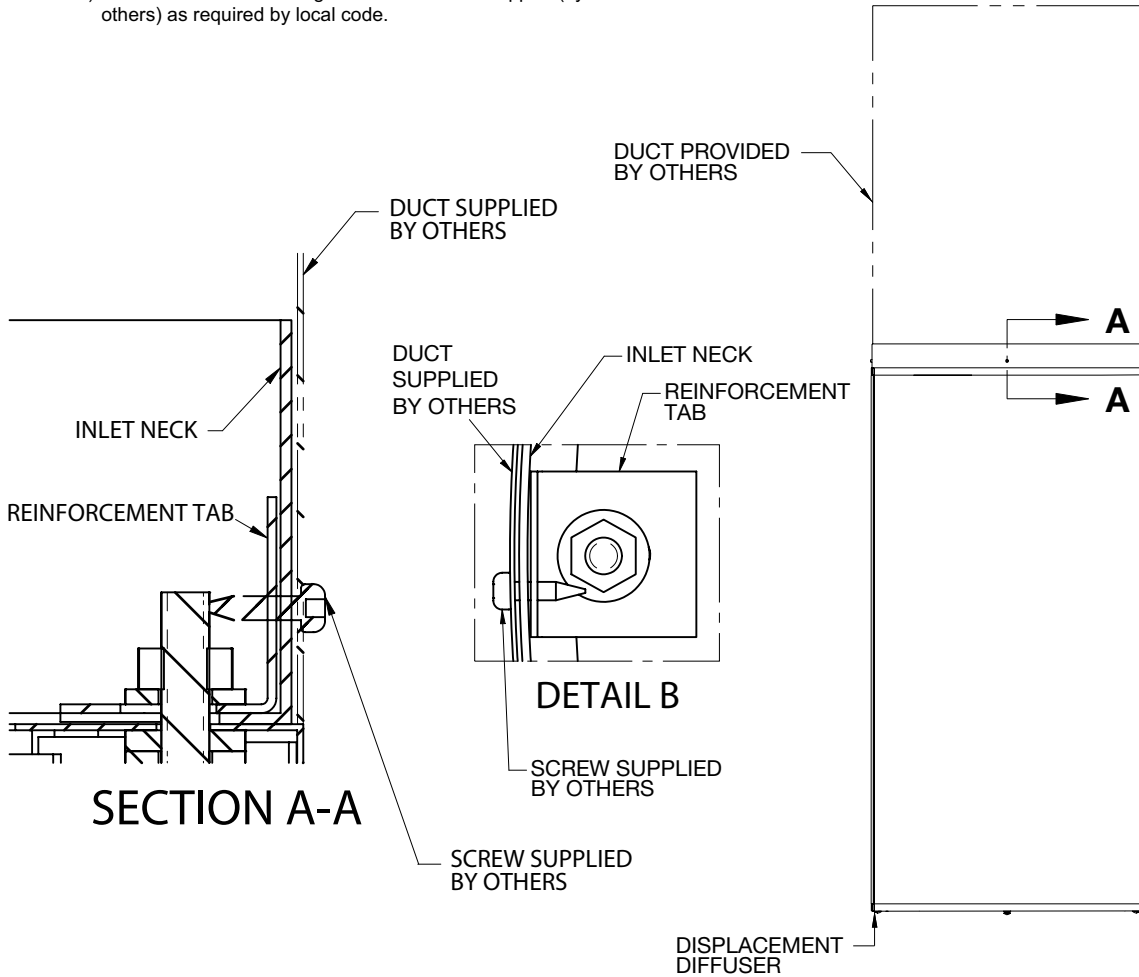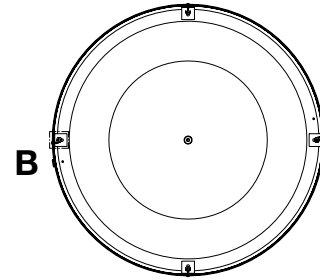

READ ALL INSTRUCTIONS BEFORE INSTALL

PRICE®



2975 Shawnee Ridge Court
 Suwanee, Georgia USA 30024
 Ph: 770.623.8050 Fax: 770.623.6404

- U.S. Head Office
- Price Technical Center
- Atlanta Manufacturing Facility



1290 Barrow Industrial Parkway
 Winder, Georgia USA 30680-5704

- Atlanta Manufacturing Facility



999 North Thornton Road
 Casa Grande, Arizona USA 85222-3809

- Price Technical Center West
- Phoenix Manufacturing Facility



638 Raleigh Street
 Winnipeg, Manitoba Canada R2K 3Z9
 Ph: 204.669.4220 Fax: 204.663.2715

- Canadian Head Office
- Price Research Center North
- International Sales Office
- Winnipeg Manufacturing Facility



130B Pippin Road
 Vaughan, Ontario Canada L4K 4X9

- Toronto Manufacturing Facility

Product Improvement is a continuing endeavour at Price. Therefore, specifications are subject to change without notice. Consult your Price Sales Representative for current specifications or more detailed information. Not all products may be available in all geographic areas.

All goods described in this brochure are warranted as described in the Limited Warranty shown at the web site www.price-hvac.com.

The Price catalog is available online at www.price-hvac.com

